



RadioShack®

www.radioshack.comSM

Touch Screen Organizer



Owner's Manual
Please read before using this equipment.

Contents

Features	5
Preparation	7
Removing the Insulation Strips	7
Opening the Cover	7
A Quick Look at the Organizer	8
Operation	10
Using the Stylus	10
Turning the Organizer On and Off	11
Turning the Key Tone On and Off	12
Resetting the Organizer/ Selecting a Language	12
Setting/Viewing the Time	14
Setting Daylight Saving Time	14
Setting a Time Format	15

© 2001 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

Setting the Home Date/Time	15
Viewing a World Time	21
Using the Phone Directories	24
Entering a Phone Directory Record	25
Using the Schedule Alarm	29
Entering a Schedule Alarm Record	30
Working With Records	34
Recalling a Record	34
Editing a Record	36
Deleting a Record	37
Using the Daily Alarm	38
Setting the Daily Alarm	39
Setting the Hourly Chime	41
Using Passwords	41
Setting the Password	42
Changing the Password	43
Using Conversions	44
Changing Exchange Rates	46
Converting Currency	47
Converting Measurements	48

Using the Calculator	49
Memory Calculations	50
Percentage Calculations	51
Constant Calculations	52
Reciprocal Calculations	53
Exponent Calculations	54
Care and Maintenance	55
Replacing the Batteries	57
Specifications	61

Features

Your RadioShack Touch Screen Organizer is a pocket-size data organizer. It's great for the person on the go, combining functions including a telephone directory, daily alarm, schedule alarms, a calculator, and more in one compact, easy-to-use package.

Touch Screen Panel — the organizer's panel is designed like a modern personal digital assistant (PDA) for ease of use. You use the supplied stylus to quickly select, view, and enter information.

2K Memory — gives you ample space for storing phone numbers and schedule alarm memos.

Key Tone Control — lets you turn the key tone on or off.

4-Character Password — helps prevent unauthorized access to your stored information.

7-Language Display — lets you display any of 7 languages.

Automatic or Manual Power-Off — conserves battery power by turning off the organizer about 4 minutes after you stop using it. You can also turn off the organizer by pressing a single button.

Important: RadioShack Corporation assumes no responsibility for any loss or claims that might arise through use of this organizer or for damages incurred as a result of information loss due to malfunctions, repairs, battery replacement, or misuse. You should maintain written records of important information to protect against such loss.

Preparation

REMOVING THE INSULATION STRIPS

 
Your organizer comes with two insulation strips that help preserve battery power during shipping.

Before using the organizer, remove both insulation strips from the battery compartment (located in the back of the organizer) by grasping and pulling them away from the organizer. Then reset the organizer (see “Resetting the Organizer/Selecting a Language” on Page 12).


OPENING THE COVER


Simply lift the organizer’s cover to open it.


A Quick Look at the Organizer

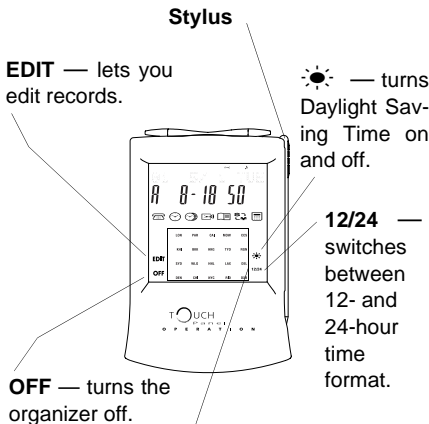



City Codes — you can select and view the date and time in any of these cities.


 — helps you organize phone directory records and general information about contacts. You can put names, phone numbers, fax numbers, cell phone numbers, pager numbers, and e-mail addresses at your fingertips.

 — keeps track of the time in your local time zone.

 — keeps track of the time in 31 other world cities.

 — lets you set the daily alarm to sound daily at a time you preset and set the hourly chime to sound two beeps at the beginning of every hour.

 — lets you set appointment times and reminders. You can store up to 47 schedule records (32 characters per record).

 — lets you perform currency conversions and convert to and from metric measurements

 — lets you do arithmetic calculations.

Operation

USING THE STYLUS

Your organizer comes with a stylus that helps you touch the organizer's function keys and select entries easily and accurately.

Important: To protect the display, use only the supplied stylus to press the organizer's keys. Do not use a pen, pencil, or other sharp object to press the organizer's keys.

To remove the stylus from its slot on the right side of the organizer, gently press it against the organizer while sliding it up. After using the stylus, slide it back into the slot.




TURNING THE ORGANIZER ON AND OFF

To turn on the organizer, use the stylus to press anywhere on the lower half of the display.

The organizer automatically enters its home time mode after you turn it on. An animation of the name of your home city and the time in that city appear. Then, the name of the home city and the date and the day of the week in that city scroll across the display. You can press any key to stop the animation and make the date and the day of the week appear steadily.

To conserve battery power, the organizer automatically turns off after about 4 minutes if you do not press any key. Press **OFF** to turn it off sooner.

TURNING THE KEY TONE ON AND OFF

You can set your organizer to sound a tone each time you press a key. To turn the tone on or off, press  then . When the key tone is on,  appears on the upper right side of the display.



RESETTING THE ORGANIZER/ SELECTING A LANGUAGE

You might need to reset the organizer if:

- it stops operating properly.
- you forget your password.
- you want to change the display language.

When you reset the organizer, you can then choose the language that appears

on its display. You can choose **ENGLISH** (English), **FRANCAIS** (French), **DEUTSCH** (German), **ITALIANO** (Italian), **ESPAÑOL** (Spanish), **NEDERLANDS** (Dutch), or **PORTUGUES** (Portuguese). Your organizer is pre-set to display English.





1. Use the stylus or a pointed object such as a straightened paper clip to press the RESET hole on the back of the organizer. **RESET?** appears.
2. Press **ENTER**. **RESET!** briefly appears, then **ENGLISH?** appears. All the information stored in the organizer's memory is erased.
3. Repeatedly press  or  to select the desired language.
4. Press **ENTER** to store the setting. The language you selected briefly appears (**ENGLISH** appears if you

selected English, for example), and the home time display returns.

Note: You must reset the current date and time when you reset the organizer.



SETTING/VIEWING THE TIME

Setting Daylight Saving Time

You can set your organizer so it displays the correct time during Daylight Saving Time. To turn Daylight Saving Time on or off, press  (to set the organizer to its home time mode) or  (to set the organizer to its world time mode), then press .  appears at the top of the display if Daylight Saving Time is on.

Note: Not all cities use Daylight Saving Time.

Setting a Time Format

You can set the organizer so it displays time in either 12- or 24-hour format. To set the time format, press  or  to set the organizer to its home or world time mode, then press **12/24**. In the 12-hour format, **A** (AM) or **P** (PM) appears to the left of the time.

Setting the Home Date/Time


You can set your organizer's home time to one of 32 cities. When you set the date and time for your home time city, all other world times are set automatically.



Note: If your city is not listed in the table on Page 16, use a city in the same time zone as yours to set the home time.





City	Screen Code
London	LONDON
Paris	PARIS
Rome	ROME
Berlin	BERLIN
Helsinki	HELSINKI
Cairo	CAIRO
Istanbul	ISTANBUL
Moscow	MOSCOW
Tehran	TEHERAN
Dubai	DUBAI
Kabul	KABUL
Karachi	KARACHI
Delhi	DELHI
Dhaka	DHAKA

City	Screen Code
Yangon	YANGON
Bangkok	BANGKOK
Hong Kong	HONG KONG
Singapore	SINGAPORE
Beijing	BEIJING
Tokyo	TOKYO
Adelaide	ADELAIDE
Sydney	SYDNEY
Wellington	WELLINGTON
Honolulu	HONOLULU
Anchorage	ANCHORAGE
Los Angeles	LOS ANGELES
Denver	DENVER
Chicago	CHICAGO

City	Screen Code
New York	NEW YORK
Toronto	TORONTO
Caracas	CARACAS
Rio de Janeiro	RIO DE JANEI

1. Press  to set the organizer to its home time mode. An animation of the name of your home city and the time in that city appears. Then, the name of the home city and the date and the day of the week in that city scroll across the display.
2. Press **EDIT** to set the home time. The currently set home city flashes. (Or, press any key to stop the animation and make the date and the day of the week appear steadily, then press **EDIT** to set the home time).

3. Repeatedly press  or  to select your home city code or a home city in the same time zone as yours.
4. Press **ENTER** to store the setting. The first digit of the year flashes on the first row of the display.
5. Press number keys to enter the year (two digits). The first digit of the month flashes.

Note: You can repeatedly press , , , and  to move the cursor to wherever you want to change displayed information.

6. Press number keys to enter the month (two digits). The first digit of the day flashes.

7. Press number keys to enter the day (two digits). The first digit of the hour flashes.
8. Press number keys to enter the hour (two digits). The first digit of the minute flashes.
9. Repeatedly press **AM/PM** to toggle between AM and PM.
10. Press number keys to enter the minute (two digits), then press **ENTER** to store the setting. The organizer returns to the home time mode.

Notes:


- If the date and time you enter is invalid (for example, you entered 20 for the month), **ERR** briefly appears after you press **ENTER**. Then, the original year and date and time



appear, and a flashing cursor appears on the first character of the year. Re-enter the correct date and time, then press **ENTER**.

- The organizer automatically sets the day of the week when you press **ENTER**.

Viewing a World Time

Once you set your home time, follow these steps to view the time in any of 31 cities around the world.

1. Press  to enter the world time mode. An animation of the name of the selected world city and the time in that city appear. Then, the name of the world city and the date and day of the week in that city scroll across the display.



2. Repeatedly press  or  to select the desired city. An animation of the name of the selected world city and the time in that city appear. Then, the name of the city and the date and day of the week in that city scroll across the display.

Or, press one of the city codes that appear below the date and time to select a city. The list contains the following cities:

Screen Code	City	Screen Code	City
LON	London	HKG	Hong Kong, Singapore, Beijing
PAR	Paris, Rome, Berlin	TYO	Tokyo

Screen Code	City	Screen Code	City
CAI	Cairo, Helsinki, Istanbul	WLG	Wellington
MOW	Moscow, Tehran	HNL	Honolulu, Anchorage
DXB	Dubai, Kabul	LAX	Los Angeles
KHI	Karachi	DEN	Denver
DEL	Delhi, Dhaka	CHI	Chicago
RGN	Yangon	NYC	New York, Toronto
BKK	Bangkok, Adelaide	CCS	Caracas
SYD	Sydney	RIO	Rio de Janeiro


Cities appearing in the same entry in the list are in/near the same time zone.

3. Repeatedly press  or  to view other cities in the same time zone or close to that time zone.



USING THE PHONE DIRECTORIES





You can store a contact's name, home phone number, work phone number, fax number, cell phone number, and e-mail address into each record in the organizer's phone directory. You can store up to 83 records in the phone directory (entering 8 characters per name and 12 digits per phone number).

Entering a Phone Directory Record


1. Press  to enter the phone directory mode. **NAME?** appears.
2. Enter the contact's name (up to 36 characters).

Note: Since the organizer stores phone directory records alphabetically by name, you might want to enter last names first.

3. Press ▼ . , **HOME#?**, and a flashing cursor appear.
4. Enter a home phone number (up to 12 characters).
5. Press ▼ . , **WORK#?**, and a flashing cursor appear.

6. Enter a work phone number (up to 12 characters).
7. Press ▼ . , **FAX#?**, and a flashing cursor appear.
8. Enter a fax number (up to 12 characters).
9. Press ▼ . , **CELL#?**, and a flashing cursor appear.
10. Enter a cell phone number (up to 12 characters).
11. Press ▼ . , **PAGER#?**, and a flashing cursor appear.
12. Enter the pager number (up to 12 characters).
13. Press ▼ .  and **E-MAIL?** appear.

14. Enter an e-mail address (up to 36 characters).
15. Press **ENTER** to store the setting. **FREE** and the amount of available memory briefly appear, then **NAME?** appears.

Note: **FULL** appears if the memory is full. You can delete records to free memory (see “Deleting a Record” on Page 37).
16. Repeat Steps 2–15 to enter another phone directory record. Or, press  to return to the home time mode.

Notes:

- Repeatedly press a number key to enter that number or a letter next to it.
- To enter a letter (or two letters next to the same number) twice, repeat-

edly press the number key until the letter appears, press ►, then repeatedly press the number key to enter the second letter.

- To enter a space, press •/**SPACE** or ► .
- To enter a period, press •/**SPACE** .
- To enter a symbol (–, @, #, \$, £, ¥, (,), ~, ', :, /, \, _, &, and %), repeatedly press **SMBL** until the symbol appears. To enter another symbol consecutively, press ► then enter the next symbol.
- To change an incorrect character, move the cursor to the character you want to change, then enter the correct one.
- To delete a character, move the cursor to the character, then press **DEL**.

USING THE SCHEDULE ALARM

Your organizer's schedule alarm helps you stay in control of your busy schedule by reminding you of meetings and other important events. You can store up to 47 schedule alarm records (32 characters in each record).

At the preset schedule alarm time, the organizer sounds an alarm for 30 seconds and a message you stored flashes. If the organizer is off at the alarm time, the organizer turns itself on, sounds the alarm, and displays the message. Press any key to silence the alarm sooner.



Notes:

- Because pressing any key turns off the alarm, the alarm might not sound

if you are entering information at the alarm time.

- If the alarm sounds and the alarm message flashes while you are entering information, the information you are entering might not be stored.

Entering a Schedule Alarm Record

1. Press  to enter the schedule alarm mode. **SCHEDULE?** appears.
2. Enter the message you want to appear when the alarm sounds. **00-00 A00-00** (or **00-00 00-00** in 24-hour time format) appears on the second row of the display.
3. Press  or **ENTER**. The cursor moves down.

Note: The time display format that appears matches the one you selected in “Setting a Time Format” on Page 15.


4. Enter the date and time of the schedule alarm.
5. Press number keys to enter the date and time of the schedule alarm.
6. Repeatedly press **AM/PM** to toggle between AM and PM (in 12-hour format).
7. Press **ENTER**. The percentage of available free space briefly appears, then **SCHEDULE?** appears.

Notes:

- If the information you enter is invalid (for example, you enter 20

for the month), **ERR** briefly appears after you press **ENTER**. Then a flashing cursor appears on the year's first digit. Re-enter the date and time, then press **ENTER**.

- **FULL** appears if the memory is full. You can delete schedule alarm records or other records to free the memory (see "Deleting a Record" on Page 37).

8. Repeat Steps 2–7 to enter another schedule alarm record. Or, press  to return to the home time mode.

Notes:

- Repeatedly press a number key to enter that number or a letter next to it.
- To enter a letter (or enter two letters next to the same number) twice,







repeatedly press the number key until the letter appears, press ►, then repeatedly press the number key to enter the second letter.

- To enter a space, press •/SPACE or ► .
- To enter a period, press •/SPACE .
- To enter a symbol (–, @, #, \$, £, ¥, (,), ~, ', :, /, \, _, &, and %), repeatedly press **SMBL** until the symbol appears. To enter another symbol consecutively, press ►, then enter the next symbol.
- To change an incorrect character, move the cursor to the character you want to change, then enter the correct one.
- To delete a character, move the cursor to the character, then press **DEL**.

WORKING WITH RECORDS

You can recall, edit, and delete records you stored in your phone directory and your scheduler.

Recalling a Record





 
1. Press  to enter the phone directory mode or  to enter the schedule alarm mode.
2. Repeatedly press  or  to view the phone directory records in alphabetical order or the schedule alarm records in chronological order. You can also enter the first few characters of the desired record, then press  or . The first matching record appears.



Note: If there are no records stored in your organizer or if there is no

matching record, **NOT FOUND** briefly appears, then **NAME?** or **SCHEDULE?** appears.

3. Repeat Steps 1 and 2 to recall another record.


Notes:





- The first 12 characters of a record appear in each row of the record. If the displayed row has more than 12 characters, ► appears at the end of the row. Press ◀ or ► to view the entire row.
- In phone directory records, press ▲ and ▼ to view the next field. , , , , or  appears to indicate a home, work, fax, cell phone, or pager number respectively.


- Press  to toggle between the e-mail field and the contact name field in phone directory records.  appears on the top of the display when there is an e-mail address.

Editing a Record

1. Recall the record you want to edit (see “Working With Records” on Page 34).
2. Press **EDIT** . A flashing cursor appears on the first character of the record.

Note: To edit the e-mail address in a phone directory record, press  then **EDIT**.

3. Repeatedly press , , , or  to move the cursor to the area you want to edit.


4. To change a character, move the cursor to the character you want to change, then enter the character.
5. To delete a character, move the cursor to the character, then press **DEL**.
6. Move the cursor to the e-mail field (in phone directory mode) or the second row (in schedule alarm mode), then press **ENTER**. The amount of available memory briefly appears, then **NAME?** or **SCHEDULE?** appears.
7. Repeat Steps 1–6 to edit another record. Or, press  to return to the home time mode.

Deleting a Record

1. Recall the record you want to delete (see “Working With Records” on Page 34).

2. Press **DEL**. **DELETE?** appears.
3. If you are sure you want to delete the record, press **ENTER**. **DELETE!** briefly appears when the organizer deletes the record, then a mode prompt message (for example, **NAME?**) appears.

Otherwise, press any key except **ENTER**. The record remains unchanged.

4. Repeat Steps 1–3 to delete another record. Or, press  to return to the home time mode.


USING THE DAILY ALARM


You can use your organizer to set an alarm to sound for about 30 seconds at a preset time every day. To silence the alarm sooner, press any key.

Notes:


- Because pressing any key turns off the alarm, the alarm might not sound if you are entering information at the precise alarm time.
- If the alarm sounds and the alarm message flashes while you are entering information, the information you are entering might not be stored.

Setting the Daily Alarm

1. Press  to enter the alarm setting mode. **AL** and **A 12 - 00** (in 12-hour time format) or **0 - 00** (in 24-hour time format) appears.
2. Press **EDIT**. The first digit of the hour flashes.


 


3. Enter the alarm time. Then press **ENTER** to store the setting. ((.)) appears on the top of the display.
4. Press  to return to the home time mode.

Note: If the alarm time you entered is invalid, **ERR** briefly appears after you press **ENTER**, then **AL** and **A 12 - 00** (or **00 - 00** in 24-hour time format) appears. Enter a valid alarm time and press **ENTER**.

To turn off the daily alarm, press  then press ((.)) on the lower right side of the display. ((.)) on the upper right side of the display disappears.

SETTING THE HOURLY CHIME

The organizer's hourly chime sounds 2 beeps at the beginning of each hour. You can turn the hourly chime on or off.

1. Press  to enter the alarm setting mode.
2. Repeatedly press  until  appears or disappears to turn the hourly chime on or off.
3. Press  to return to the home time mode.




USING PASSWORDS

The organizer lets you block access to your phone directory and schedule alarm records. Once you set a password of up

to 4 characters, phone directory records and schedule alarm records are locked until you enter the password.




Setting the Password

You can set a password in the phone directory and schedule alarm modes.


1. Press  to enter the alarm setting mode.
2. Press . **PASSWORD?** appears.
3. Enter the password (up to 4 characters).
4. Press **ENTER** to store the setting.  appears at the top of the display. Then the organizer returns to its home time mode.

Note: Be sure you set a password that you can easily remember. If you forget it, you must reset the organizer, which clears all records. See “Resetting the Organizer/ Selecting a Language” on Page 12.

Changing the Password

1. Press  to enter the alarm setting mode.
2. Press . **PASSWORD?** appears.
3. Enter the current password, then press **ENTER**. **PASSWORD?** appears and  disappears.
4. Press **ENTER** to cancel the password. The organizer returns to its home time mode.

Or, to change the password, enter a new password, then press **ENTER**.

 appears and the organizer returns to its home time mode.

USING CONVERSIONS

The organizer's conversion function lets you perform metric and currency conversions. The following conversion rates are preset in your organizer:

Conversion	Rate
Inch → Centimeter	2.54
Yard → Meter	0.9144
Mile → Kilometer	1.609
C° → F°	1.8
Foot → Meter	0.3048
Ounce → Gram	28.35

Conversion	Rate
Pound → Kilogram	0.4536
US Gallon → Liter	3.785
EUR → ATS	13.7603
EUR → DEM	1.95583
EUR → FRF	6.55957
EUR → ITL	1936.27
EUR → BEF	40.3399
EUR → ESP	166.386
EUR → PTE	200.482
EUR → IEP	0.787564
EUR → NLG	2.20371


You can also change any of the currency exchange rates you choose.

Note: You cannot change the preset metric conversions.

 




Changing Exchange Rates


1. Press **₹**. **EUR** → **ATS** and **0** appear.
2. Repeatedly press **↗** or **↘** to select the exchange rate you want to change.
3. Press **EDIT**. A flashing cursor and the exchange rate you selected appear.
4. Enter the new currency name (up to 3 characters) and press **◀** and **▶** to move the cursor to the area you want to edit.
5. Enter additional currency names (up to 3 characters).
6. Press **▼** to select a currency exchange rate.
7. Enter the new exchange rate for each currency you added (up to 6

digits), then press **ENTER** to store the setting.

 




8. Press  to return to the home time mode.

Converting Currency


1. Press . **EUR** → **RTS** and **0** appear.
2. Repeatedly press  and  to select the exchange rate.
3. Press **DEL**. The exchange rate appears.
4. Enter the number you want to convert.
5. Repeatedly press  and  to select the direction of conversion and convert the number. The result appears.

6. Press **DEL** to clear the converted number and show the exchange rate again.
7. Repeat Steps 4–6 to convert another number. Or, press  to return to the home time mode.


Converting Measurements

1. Press  twice. **INCH** → **CM** and **0** appear.
2. Repeatedly press  and  to select the unit of measurement.
3. Press **DEL**. The conversion rate appears.
4. Enter the number you want to convert.
5. Repeatedly press  and  to select the direction of conversion

and convert the number. The result appears.

6. Press **DEL** to clear the converted number and show the measurement rate again.
7. Repeat Steps 4–6 to convert another number. Or, press  to return to the home time mode.

USING THE CALCULATOR

You can use your organizer to perform arithmetic calculations. Press  to enter the calculation mode. **0.** appears. To clear a calculation, press **C/CE**.

Notes:

- If the result of a calculation has more than 10 digits, or if you try to divide

by 0, **ERR** (error) appears. To clear the error, press **C/CE**.

- If you press the wrong operation key (+, −, × or ÷), simply press the correct one and continue with your calculation.
- If you enter a wrong number, press **C/CE** and re-enter the correct number before you press =.

Memory Calculations

To perform multi-step calculations:

- Press **MC** to clear the memory.
- Press **M+** to total a calculation and add the total to the value in memory.
- Press **M−** to total a calculation and subtract the total from the value in memory.

- Press **MR** to recall (display) the value in memory.

For example: $3 \times 4 + 20 \times 3 - 56 \div 8$

You Press	You See
3×4 M+	m 12
20×3 M+	m 60
$56 \div 8$ M-	m 7
MR	m 65

Note: **m** appears on the upper left side of the display when a value is stored in memory. **m** disappears when you clear the memory.

Percentage Calculations

To find a percentage of a number, type the number, then \times , the percentage, and %.

For example, to find 3 percent of 12:

You Press	You See
$12 \times 3 \%$	0.36

Constant Calculations

For multiplication, the calculator repeats the first number and the \times . For all other operations, the calculator repeats the operator and the second number. For example, in the calculation 5×6 , $5 \times$ is the constant. In the calculation $12 - 4$, $- 4$ is the constant.

Press = to repeat the last function. For example, to calculate $5 \times 5 \times 5 \times 5 + 2 + 2 = 629$:

You Press	You See
$5 \times = = = + 2 = =$	629

Reciprocal Calculations

Example: $\frac{1}{8} = 0.125$

You Press	You See
$8 \div =$	0.125

Exponent Calculations

Example: $6^5 = 7776$

You Press	You See
$6 \times = = = =$	7776

Care and Maintenance

Keep the organizer dry; if it gets wet, wipe it dry immediately. Use and store the organizer only in normal temperature environments. Handle the organizer carefully; do not drop it. Keep the organizer away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the organizer's internal components can cause a malfunction and might invalidate its warranty. If your organizer is not performing as it should, take it to your local RadioShack store for assistance.

Notes:

- At very low temperatures, the display's response time might slow down or the display might fail completely. This is only temporary. The organizer works normally again when it returns to a normal temperature.
- If the organizer is exposed to strong static electric charges, the display might become dim or the organizer might fail to operate properly. If this happens, reset your organizer (see "Resetting the Organizer/Selecting a Language" on Page 12).

REPLACING THE BATTERIES




Your organizer requires two CR2032 lithium batteries (supplied), one for power and one to protect the organizer's memory. For the best performance and longest life, we recommend RadioShack lithium batteries.

Important: To avoid losing stored information:

- Be sure to set the organizer to its battery-replacement mode before removing either battery.
- Always replace the main power battery first then replace the backup battery. Never remove both batteries from the battery compartment at the same time.

- Remove an old battery and install a new one within 1 minute. Otherwise, the organizer erases all stored information.
- Make sure to install a new battery with the correct polarity (positive (+) side up). Installing a battery incorrectly might cause the organizer to erase all stored information.

Caution: Use only fresh batteries of the required size and recommended type.

1. To set the organizer to its battery-replacement mode, press , hold down the stylus on a point about 5 mm below  until  appears, then press **ENTER**.
2. Use a Phillips screwdriver to remove the battery compartment cover's screw from the back of the organizer, then remove the cover.

3. Insert the tip of the screwdriver into the hole next to the main power battery (marked MAIN in the battery compartment), then gently pry out the old battery.
4. Position a new battery with its positive (+) side up, then press down on the battery to secure it.
5. Repeat Steps 3 and 4 to remove and replace the backup battery (marked BACKUP in the battery compartment).
6. Place the battery compartment cover's tabs into the slots on the bottom of the battery compartment, then replace the cover and secure it with the screw.
7. Use the stylus or a pointed object such as a straightened paper clip to

press the RESET hole on the back of the organizer. **RESET?** appears. Then press any key except **ENTER**.

8. Reset the time and date.

When the display dims or the organizer stops operating properly, replace the batteries.

Warnings:

- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.



Specifications

Power Source 2 × CR2032 Batteries

Battery Life About 1 year
(operates 30 minutes per day)

Automatic Power-Off About 4 minutes

Working Temperature 32° to 109°F
(0° to 43°C)

Storage Temperature -4° to 140°F
(-20° to 60°C)

Dimensions (HWD): .. $4\frac{3}{16} \times 2\frac{7}{8} \times \frac{3}{8}$ Inches
(107 × 73 × 10 mm)

Weight (without Battery) 2.6 oz
(73.7 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.



Notes

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts (*continued*)

(continued) and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street,
6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack Corporation
Fort Worth, Texas 76102

65-1205
07A01
Printed in China